



WIRELESS KARAOKE MICROPHONE & SPEAKER

PLAYING MUSIC (CONTINUED)

- 1. PLAYING/PAUSING MUSIC
 - Quick press the II button to pause media playback.
 - Quick press the | button to resume media playback.

LED LIGHT SETTING

Once Karaoke is on, press the LED Power Button once to change the LED colors on Karaoke

SING ALONG VOLUME

You can control the loudness of your voice when singing with the Karaoke by adjusting the volume on the front of the Karaoke

PAIRING THE SPEAKER

- 1. Hold the **b** button on the front of the speaker. Tone will be heard indicating that the power is ON in pairing mode and LED indicator will quickly flash BLUE.
- Set your Bluetooth-enabled device to search for KARAOKE.
- When your Bluetooth enabled device finds KARAOKE select it from the list of found devices.
- After a successful pairing, a tone will be heard indicating that the speaker is paired to your device and the LED indicator will stay solid BLUE.

USING THE SPEAKER

- 1. POWERING ON/OFF
 - To turn the speaker ON, long press the

button. A tone will be heard indicating that the speaker has power.

CHARGING

Take the cable supplied with your Karaoke and plug the micro part of the cable to the Karaoke. Plug the USB plug into and USB computer or wall (head (optional

When charging, the LED light indicator will turn red. When fully charged the light will turn off

Model: 215168 IC: 22563-215168

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the :following two conditions

This device may not cause interference; and (1) This device must accept any interference, (2) including interference that may cause undesired operation of the device

Manufacturer Warranty

We stand by our products. That's why we guarantee them from functional defects for one year from the original date of purchase. Should you have an issue please email us at info@GabbaGoods.com

To turn the speaker OFF, long press the **b** button. A tone will be heard indicating that the speaker has powered off.

1. ADJUSTING VOLUME

- To increase the volume move the volume slider up toward the "+" marking on the side of the speaker.
- To decrease the volume move the volume slider up toward the "-" marking on the side of the speaker.

NOTE: The echo effect can cause feedback from the speaker, resulting in a high pitched or distorted whistle. If you are experiencing this, lower the echo effect levels.

PLAYING MUSIC

To enjoy music wirelessly on your speaker, make sure that the speaker is properly paired to your Bluetooth-enable device. If you are pairing the device for the first time please consult the "Pairing the Speaker" section of this guide.

