

# WATCH LED TOUCH SCREEN

## LED Instructions:

### 1. Touch Area

Note this is a touch screen LED watch.  
There are no buttons.  
Press "R" side on screen to show time.  
Remove sticker from lens to begin.

### 2. Display Mode

Press "R" side on screen once to show time,  
twice to show date, three times to show seconds.  
To start over, don't touch screen.  
Screen will automatically turn off after 5 seconds.



### 3. Setting

#### \*Hour

Press "R" side on screen once to start.  
Then press "L" once. Hour will flash.  
Then press "R" to advance to desired Hour.

#### \*Minute

Then press "L" once. Minutes will flash.  
Then press "R" to advance to desired Minute

#### \*12hr/24hr

Then press "L" once. 12HR /24HR will flash.  
Then press "R" to advance to desired time format.  
Under 12HR PM is indicated with a dot next to the hour.

#### \*Month

Then press "L" once. Month will flash.  
Then press "R" to advance to desired Month

#### \*Date

Then press "L" once. Date will flash.  
Then press "R" to advance to desired Date

#### \*Year

Then press "L" once. Year will flash.  
Then press "R" to advance to desired Year

For Questions or Concerns please email: [info@accutimewatch.com](mailto:info@accutimewatch.com)

95 x 95 mm